



0051-CPR-2741
0051-CPR-2826
0051-CPR-2827

EN 54-2
EN 54-4
EN 54-16
EN 54-21
EN 12094-1



PREVIDIA|ULTRA

CONTROL PANEL FOR FIRE DETECTION AND ALARM,
FIRE EXTINCTION AND VOICE-EVACUATION SYSTEMS



MANUAL FOR SYSTEM
CONFIGURATION, COMMISSIONING
AND MAINTENANCE



Warranty

INIM Electronics s.r.l. warrants that this product shall be free of defects in material and workmanship for a period of 24 months from the date of production. In consideration of the fact that INIM Electronics s.r.l. does not install directly the products here indicated, and due to the possibility they may be used with other products not manufactured by INIM Electronics, INIM Electronics cannot guarantee the performance of the security installation. Seller obligation and liability under this warranty are expressly limited to repairing or replacing, at seller's option, any product not meeting its stated specifications. In no case can INIM Electronics s.r.l. be held responsible or liable by the buyer or any other person for any loss or damage, direct or indirect, consequential or incidental.

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- Damage arising from improper use or negligence;
- Damage caused by fire, flood, wind or lightning;
- Vandalism;
- Fair wear and tear.

INIM Electronics s.r.l. shall, at its option, repair or replace any defective products. Improper use, that is, use for purposes other than those mentioned herein will void this warranty. For further details regarding this warranty contact the authorized dealer.

Limited Warranty

INIM Electronics s.r.l. shall not be liable for any damage caused by improper use of this product.

The installation and use of the products indicated herein must be carried out by authorized persons only. Moreover, the installation procedure must be carried out in full respect of the instructions provided in this manual.

Copyright

The information contained in this document is the sole property of INIM Electronics s.r.l.

Copying, reprinting or modification of this document, in part or as a whole, is not permitted without prior authorization in writing from INIM Electronics s.r.l. All rights reserved.

Table of contents

	Warranty.....	2
	Limited Warranty	2
	Copyright.....	2
	Table of contents	3
Chapter 1	General information	5
1.1	Manufacturer's details	5
1.2	About this manual	5
1.3	Description of the configuration and programming procedures	6
1.4	Operator classification - Access Levels	6
Chapter 2	Configuring the fire detection system.....	7
2.1	Access to programming	8
2.2	Setting the IP network address	8
2.3	Accessing the configuration menu	8
2.4	Modules addressing.....	9
2.5	Addressing the repeaters.....	10
2.6	Enrolling loop devices (IFM2L).....	11
Chapter 3	Configuration of the emergency voice system	15
3.1	Access to programming	16
3.2	Accessing the configuration menu	16
3.3	Modules addressing.....	17
3.4	Configuration of the IFAMEVAC module	17
3.5	Configuration of the IFAMFFT module.....	19
3.6	Configuration of the FPAMIAS panel	19
3.7	Configuration of the IFAMAMP module.....	21
Chapter 4	Generic configuration of the control panel.....	25
4.1	Setting the network address (Hornet+ and IDANet)	25
4.2	Configuration of the IFAMPSU and IFM24160 power-supply modules.....	25
4.3	Acquiring the configuration.....	26
4.4	Signal check and fault search	27
4.5	Factory data	27
4.6	Setting the date and time.....	27
4.7	Firmware revision	27
4.8	Registration of the control panel to Inim Cloud.....	28
Chapter 5	Commissioning.....	29
5.1	Testing the Control panel	29
5.2	Testing to detectors and manual activations.....	30
5.3	Testing signalling and activations	30
5.4	Speaker test	30
5.5	Testing the extinction system	30
5.6	Maximum time settings. Normative restrictions	30
Chapter 6	Maintenance	32
6.1	Testing the control panel.....	32
6.2	Testing the detectors	32
6.3	Manual activation test	32
6.4	Testing signalling and activations	32

General information

1.1 Manufacturer's details

Manufacturer: INIM ELECTRONICS S.R.L.

Production plant: Centobuchi, via Dei Lavoratori 10

Municipality: 63076, Montepandone (AP), Italy

Tel.: +39 0735 705007

Fax: +39 0735 704912

E-mail: info@inim.biz

Web: www.inim.biz

The personnel authorized by the manufacturer to repair or replace the parts of this system, hold authorization to work only on devices marketed under the INIM Electronics brand.

1.2 About this manual

Manual code: DCMCINEOPREVIDIAU

Revision: 1.00

This manual describes the procedures for the configuration, commissioning and maintenance of the Previdia Ultra fire-detection system.

1.2.1 Terminology

Control panel, System, Device: The main supervisory unit or any constituent part of the fire detection system.

Left, Right, Behind, Above, Below: Refer to the directions as perceived by the operator when directly in front of the mounted device.

Qualified personnel: Personnel whose training, expertise and knowledge of the products and laws regarding security systems, are capable of creating, in accordance with the requirements of the purchaser, the most suitable solution for the protected premises.

Select: Means click-on a specific item on the interface (drop-down menu, options box, graphic object, etc.).

Press: Push a button/key or tap on a video button on a touchscreen or display.

1.2.2 Graphic conventions

Following are the graphic conventions used in this manual.

Conventions	Example	Description
Text in italics	Refer to <i>paragraph 1.2.2 Graphic conventions</i>	Directs you to the title of a chapter, section, paragraph, table or figure in this manual or other published reference.
<text>	<AccountCode>	Editable field.
[Uppercase letter] or [number]	[A] or [1]	Reference relating to a part of the system or video object.

Note: *The notes contain important information relating to the text.*

Attention: *The "Attention" prompts indicate that total or partial disregard of the procedure could damage the device or its peripherals.*

1.3 Description of the configuration and programming procedures

Following is a flow chart which summarizes the operations to be carried out during the installation and commissioning phases of the Previdia Ultra system and indications regarding the manuals to refer to for each operation:

1. Installation and cabling (refer to the Installation Manual)
2. Initializing (refer to the Installation Manual)
3. Configuration from the front plate (operations described in this manual)
4. Troubleshooting (operations described in this manual)
5. Connection to a PC and reading (refer to the Programming Manual)
6. Configuring the parameters (editing data, refer to the Programming Manual)
7. Writing data on the control panel and test (refer to the Programming Manual)
8. Commissioning (operations described in this manual)
9. System handover
10. Maintenance (operations described in this manual)

1.4 Operator classification - Access Levels

The control panel has 4 distinct access levels:

Level 1: Public level - this is the normal access level of the control panel and is the access level for building inhabitants who are neither authorized to use the system nor instructed in its use.

At this level it is possible to view the information on the display and on the signalling LEDs, as well as to interact using the buttons and the touch screen to scroll through the information. Level 1 allows the following operations only:

- mute buzzer
- test signalling LEDs
- activate alarm signalling when an early-warning process is running

Level 2: Authorized users - this access level is for the system supervisors and is for authorized personnel who are adequately instructed in the use of the system and its functions.

Access requires the use of a key or entry of a valid access code with sufficient access rights. In addition to the operations described for level 1 it is also possible to carry out the following operations:

- mute alarm signalling devices
- rearm the control panel
- activate alarm signalling devices manually
- disable control panel elements
- place in test status one or more of the system elements
- manual activation of emergency

The system provides two additional sub-levels of authorized user:

- **Superuser level**, las for the previous one, with the added possibility of replacing a loop device and registering control panels to their account with the Inim Cloud service
- **Maintenance level**, same as the previous level with the added possibility of stopping the valve pulse for those models that support extinction functions

Level 3: Programming - this access level is for specialized technical operators who carry out system configuration, commissioning and maintenance.

Access requires entry of a valid access code with sufficient access rights after inserting a jumper which enables programming. Refer to the manual for system configuration, commissioning and maintenance.

Only authorized technicians, appointed by the Manufacturer can, by means of special tools, carry out repair work on the motherboard.

Level 4: only authorized technicians, appointed by the Manufacturer can, by means of special tools, carry out repair work on the motherboard.


Chapter 2

Configuring the fire detection system

Once the installation and cabling procedures have been completed (refer to the Installation Manual of the Previdia Ultra system) the system is ready for first startup.

In the case of first start-up, the selection of the control panel languages is requested, a compulsory main language and an optional secondary language (see *paragraph 4.5*).

The control panel screen will be as follows:

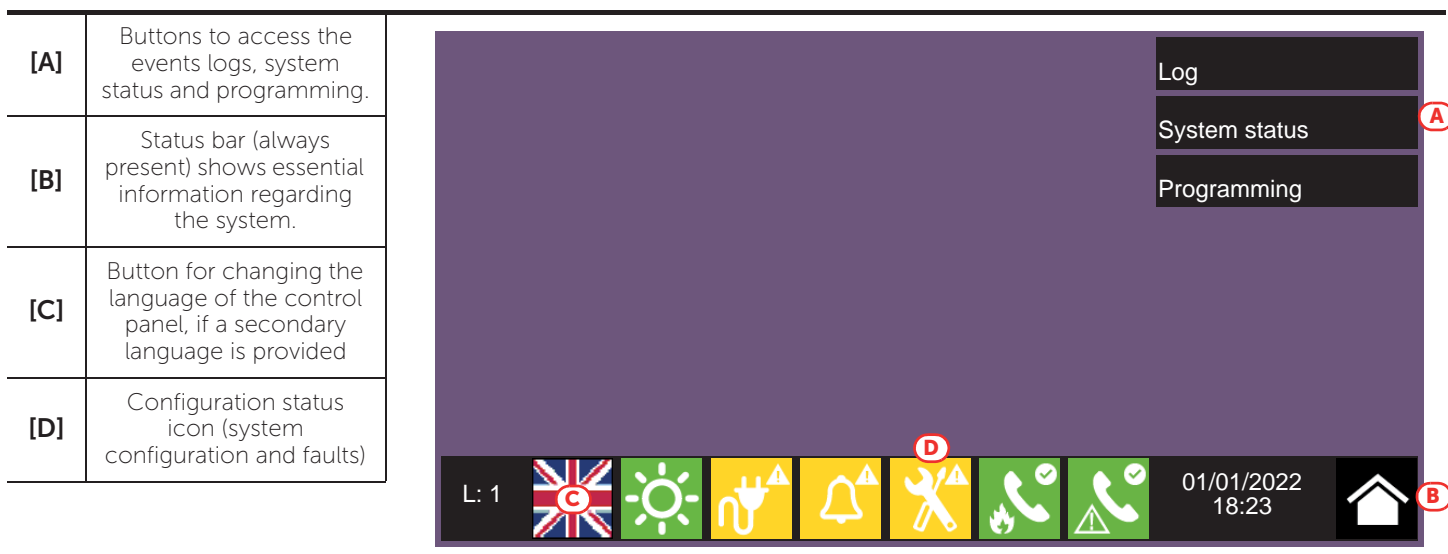

In this condition the control panel has no acquired configuration, all the modules connected to the CAN drive bar or front plate have the same address and are not included in the configuration.

The configuration status icon on the status bar indicates a fault condition, due to the fact that modules have been detected but are not present in the configuration saved in the memory.

In order to configure the control panel it is necessary to work through the following procedure:

1. Access to programming (*paragraph 2.1*)
2. Setting the IP network address (*paragraph 2.2*)
3. Access the configuration menu (*paragraph 2.3*)
4. Assign addresses to the system modules (*paragraph 2.4*)
5. Enroll loop devices on IFM2L modules and respective troubleshooting procedure (*paragraph 2.6*)
6. Acquiring the configuration (*paragraph 4.3*)
7. Check eventual signalling and search for faults (*paragraph 4.4*)
8. Setting the date and time (*paragraph 4.6*)

Note:


Once the configuration operations have been completed correctly, the control panel will be ready to operate. The control panel is configured to consider each input point (detector, module, terminal) as a fire-alarm point. Therefore, in the event of a fire alarm it will activate all the outputs available on its loops or terminals.

At this point it is necessary to proceed with eventual changes to the configuration data for the distribution of points in zones, edit descriptions of the various system elements, define specific activation sequences, etc. Refer to the Programming manual.

2.1 Access to programming


In order to access the programming session of the fire detection system, it is necessary to work through the following procedure:

1. Insert the programming jumper on the back of the FPMCPU module (see opposite, [A]).
2. Press the **Programming** button on the stand-by screen (see above - [A]).
3. A keypad will appear (see opposite, [B]) for the entry of a code with installation privileges.

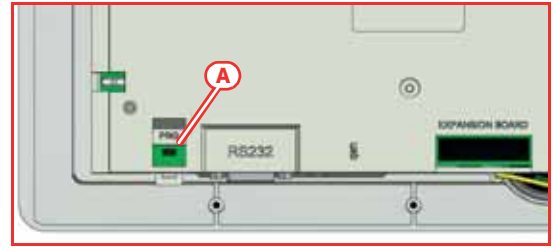

Note: The default access code to level 3 is "00004".

4. You access the programming menu, where the following items are available:
 - Configuration
 - Network
 - Factory data

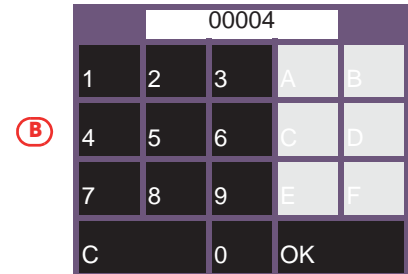

2.2 Setting the IP network address

If an Ethernet network connection is used, it will be necessary to set up the IP address and parameters of the network.


This operation must be done for anyone of the following devices:

- the Previdia Ultra control panel, via the main FPMCPU module
- the backup FPMCPU module, via the FPMCPU module itself
- the FPMCPU repeater module, when connected to an Ethernet network, via the FPMCPU module itself

In order to set the network parameters, it is first necessary to access the programming phase of the control panel (*paragraph 2.1*) and then tap on the **Network** button which appears on the screen.

The network parameters screen will be shown [A].

Beside these there is the **Backup panel** option [B]. If enabled, the FPMCPU module you are using will be set as control panel backup CPU unit. In this case, the network parameters must be the same as the parameters set for the main FPMCPU module.

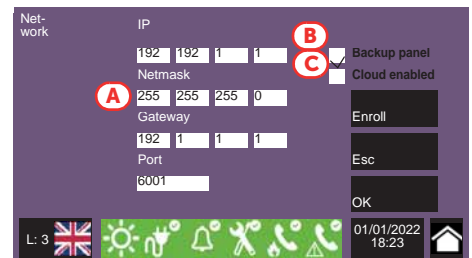

Once set, it will be necessary to tap on the **Ok** button and save the data.

If the module has been set as a backup CPU unit, the message "In backup" will appear on the display

In the same section you have the tools to register the control panel to the installer profile at the Inim Cloud service ([C] refer to *paragraph 4.8 Registration of the control panel to Inim Cloud*).

2.3 Accessing the configuration menu

To access the configuration menu it is necessary to first access the programming phase of the control panel (*paragraph 2.1*) and then tap on the **Configure** button which appears on the screen.

Alternatively, it is possible to tap directly on the configuration status icon (see above, [C]).

Entry of a valid access code is necessary In both cases.



Once the configuration menu has been accessed, the control panel screen will provide a layout of the control panel and its parts.

[A]	Internal layout of the selected cabinet	
[B]	Internal module detected	
[C]	Position empty	
[D]	Address and firmware revision of detected module	
[E]	Modules assigned to the fire detection and voice emergency system	
[F]	Modules not assigned to the fire detection system	
[G]	Map of the entire control panel	
[H]	Layout of the selected cabinet	
[I]	Button to change the network address	
[J]	Buttons to carry out setting changes or to exit without saving	

Selection of one of the cabinets from the control panel layout ([G]) will show it both on the left ([A]), where the installed IFM modules with their addresses and firmware revision are shown, and on the right ([H]), where the installed FPM external modules are shown. From this section you can access the configuration phase of each module by tapping on the icon which represents it.


The control panel also marks with an asterisk (“*”, [F]) the modules not assigned to the associated system of the front plate module we are working on (in this case, the fire protection system). Association is established by assigning an address to the module.

2.4 Modules addressing

In order for the control panel to identify each module individually, it is necessary to assign an address to each one. It is possible to assign the same address to modules of different types, however, modules of the same type must have different addresses.

To assign an address to a module, it is necessary to tap on the module shown in the section it belongs to (internal modules on the left [A]; front-plate modules on the right [G]).

A window will open ([K]), select the desired address in the “Address” field, then tap on **Set**.

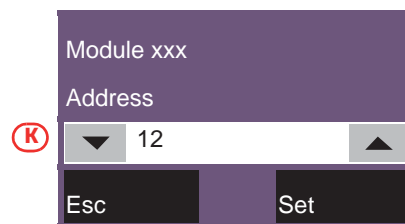

Note: *Addresses which exceed the maximum number of modules supported by the control panel will not be considered valid.
The modules that can be used by both the fire-fighting system and the voice system (FPMLED, IFM24160, IFAMPSU, IFM4R, IFM4IO, IFM16IO, [F]) must be addressed in such a way as to assign their management exclusively to one of the two systems.*

Following is a table containing the addresses allowed for each type:

FPM Module	Maximum number	Address		IFM Module	Maximum number	Address	
		from	to			from	to
FPMLED	7	1	7	IFM24160	4	1	4
FPMLEDPRN	1	/		IFM2L	8	1	8
FPMEXT	5	1	5	IFM4R	16	1	16
				IFM4IO	16	1	16
				IFMDIAL	1	/	
				IFM16IO	4	1	4
				IFMNET	1	/	
				IFMLAN	1	/	
				IFMEXT	24	1	24

Due to the fact that each FPMEXT front plate module is associated automatically with 5 internal IFMEXT modules at precise addresses, the FPMEXT modules must have an address which respects the IFMEXT - FPMEXT module association table which follows:

Addressing the extinction module					
IFMEXT	FPMEXT	IFMEXT	FPMEXT	IFMEXT	FPMEXT
1	1	11	3	21	5
2	1	12	3	22	5
3	1	13	3	23	5
4	1	14	3	24	5
5	1	15	3		
6	2	16	4		
7	2	17	4		
8	2	18	4		
9	2	19	4		
10	2	20	4		

On returning to the control-panel configuration section, the assigned address (*ID*) will be shown at the side of the previously selected internal module.

2.5 Addressing the repeaters

The procedure to configure the FPMCPU modules as repeaters depends on the type of connection between the modules and the control panel.

Connection via Ethernet network


The Ethernet connection needs network parameters setting. The procedure must be done via the display of the module itself, following the indications described in the *paragraph 2.2 Setting the IP network address*.

Connection via RS485 BUS

The BUS connection needs the addressing of any repeater in configuration, in order for the control panel to identify each module individually.

To assign an address to a repeater, it is necessary to enter the configuration procedure starting from the display of the module itself, as described in the *paragraph 2.3*.

A window will open, select the desired address in the programming field, then tap on **Set**. The available addresses are from 1 to 14.

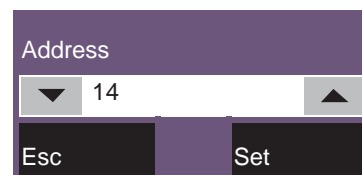


Attention: The "0" address is reserved to the main FPMCPU module. Do not use.




 
2.6 Enrolling loop devices (IFM2L)

 

 



 


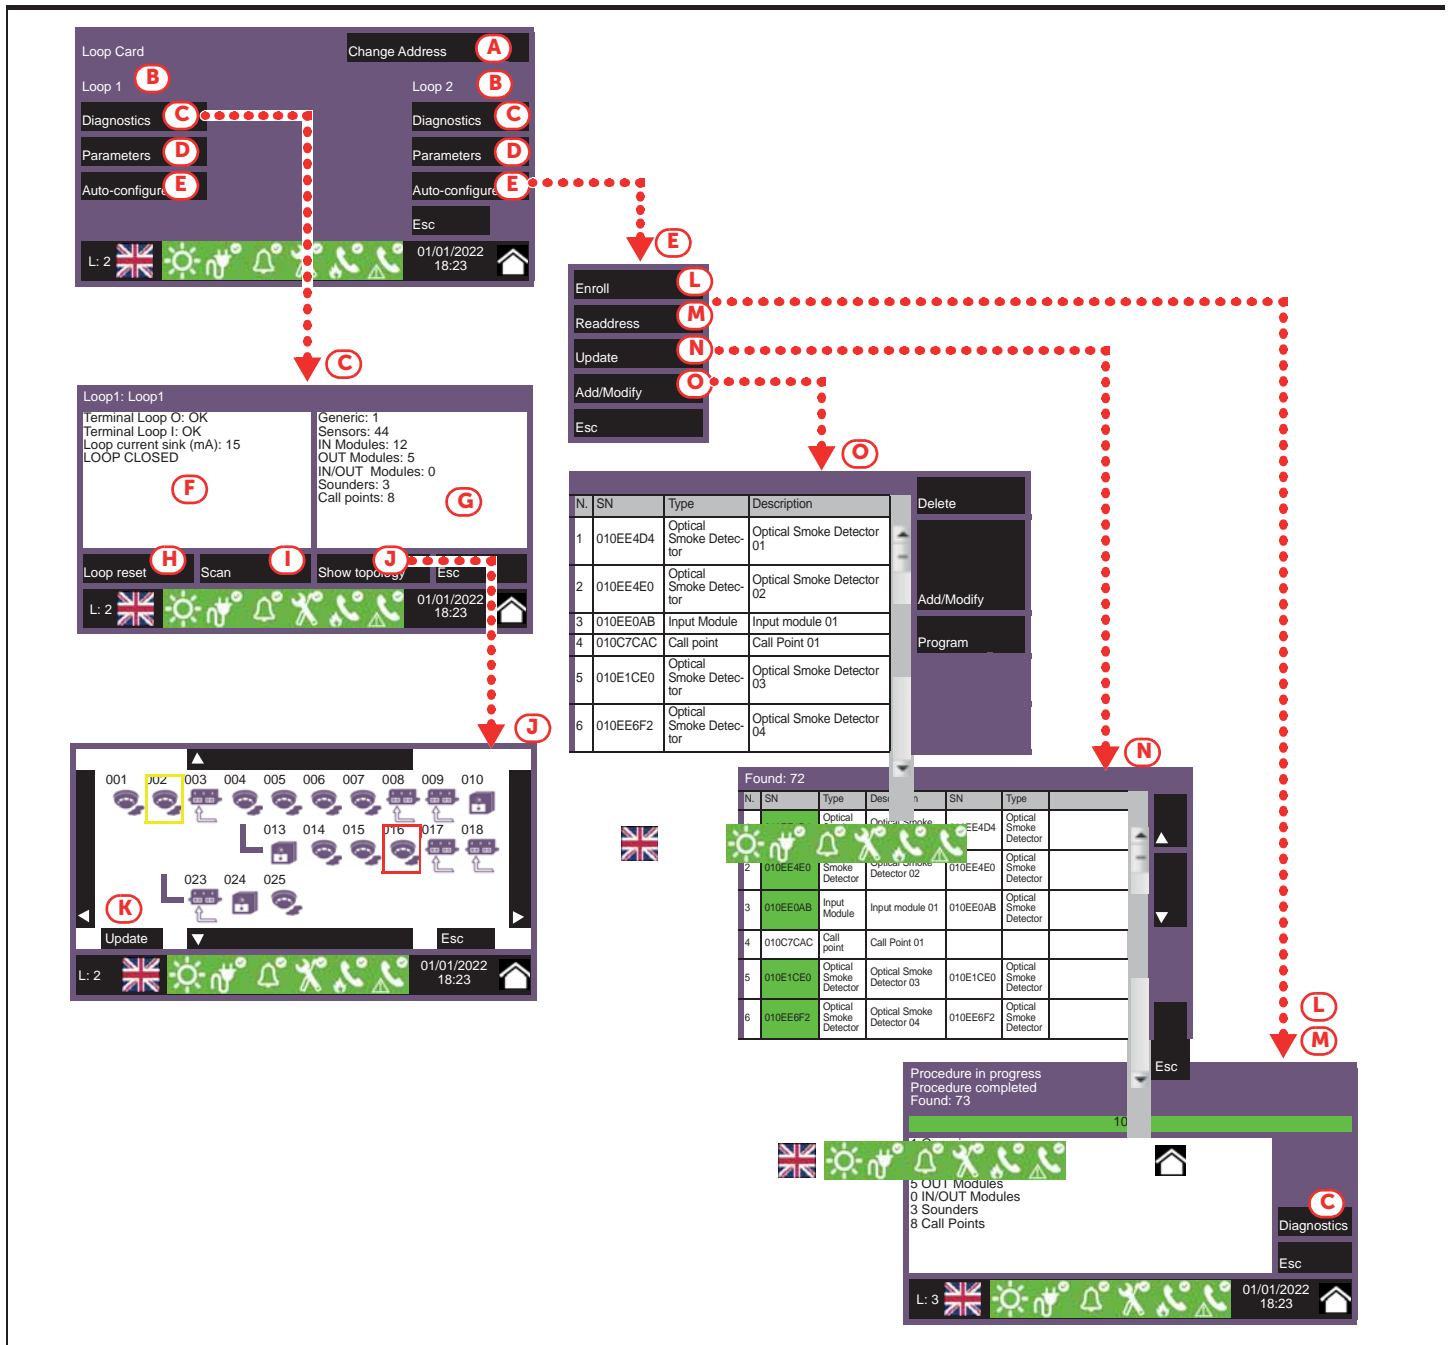The operations required for the configuration of the IFM2L network modules involve the configuration of the devices connected to the loops.

The selection of the module from the internal layout section of the cabinet (*paragraph 2.1 Access to programming, IA*) will access the configuration section which, in addition to providing the change address button (at the top) also provides two identical sections for each of the two loops (connected to the Loop-A and Loop-B terminals). The present document describes the

operations necessary for the configuration of a single loop, however, it is implicit that the operations be repeated for each of the two loop.



[A]		Button to access the section for IFM2L module address assignment (<i>paragraph 2.4 Modules addressing</i>).
[B]	Sections containing the configuration menu of the single loops. Section on the left for the loop connected to the Loop-A terminals, on the right for the Loop-B terminals.	
[C]		Button to access the section for loop diagnosis.
[D]		Button to access the section for the selection of the type of devices installed on the loop. It provides a check box for option selection "4 wires" (if the cabling has been completed as a ring circuit, as required by the fire control standards). Tap on Ok to confirm and exit.
[E]		Button to access the automatic loop-configuration procedure.

[F]	<p>Section which provides data regarding the electrical status of the loop circuit:</p> <ul style="list-style-type: none"> - Loop Status: indicates whether the loop is a closed ring circuit or open - Terminal Loop O: indicates eventual short-circuits or anomalies instantly on the "OUT" terminals - Terminal Loop I: indicates eventual short-circuits or anomalies instantly on the "IN" terminals - Loop current sink: indicates the current absorbed by the loop - Cable resistance: indicates the cable resistance value 	
[G]	<p>Section which provides the number and type of devices currently in the configuration.</p>	
[H]		<p>Button to rearm the loop and reassess the status.</p> <p>In the event of a "Loop open" fault, it will be necessary to tap on this button in order to check whether or not the interruption has been cleared.</p>
[I]		<p>Button to start a check on an already enrolled loop.</p> <p>The procedure verifies whether there are any connected devices which are not in the configuration, if devices have been lost or if there are any other anomalies.</p> <p>The result of the scan can be viewed in the section on the right (<i>(G)</i>).</p>
[J]		<p>Button which passes to the map of the devices in the configuration of the enrolled loop.</p> <p>The display provides an exact diagram of the device connections. Any devices in alarm or fault status will be outlined in red or yellow.</p> <p>The selection of a device will access its management page (refer to the Device management section in the Installation manual).</p>
[K]		<p>Button to refresh the screen by updating the alarm and fault indications of the devices shown (restored fault events will not be shown).</p>
[L]		<p>Button to perform a scan which will search the loop for devices and their serial numbers and place those found in the configuration.</p> <p>A report of the devices will be shown when the scan terminates. The "Diagnostics" button will allow you to pass to the technical report, as shown in the previous points (<i>(C)</i>).</p> <p>For loops operating with Inim or Argus protocol, it is possible to use this procedure only after completion of an automatic or manual addressing procedure by means of a programmer (EDRV1000 for Inim loops and VPU100 for Argus).</p>
[M]		<p>Button to perform a scan which will search the loop for devices and their serial numbers and assign automatically an address to each of those found in order of their connection to the loop. This operation may take several minutes depending on the size and composition of the loop.</p> <p>A report of the devices will be shown when the scan terminates. The "Diagnostics" button will allow you to pass to the technical report, as shown in the previous points (<i>(C)</i>).</p> <p>For Apollo devices, where the address is assigned by means of the microswitch on the device, these operations coincide with those previously described ("Enroll").</p>
[N]		<p>Button to start the procedure which is to be performed after changes have been carried out on a previously configured loop (add, remove or replace devices).</p> <p>The control panel will provide a table with the previously acquired configuration in the columns on the left, and the newly detected configuration in the columns on the right. Positions in which changes have not been detected will be outlined in green. Changes will be indicated in white. This operation may take some minutes depending on the size and composition of the loop.</p> <p>The OK button will allow you to accept the new configuration which will become the configuration saved to the memory.</p> <p>Procedure available for loops with Inim protocol only.</p>
[O]		<p>Button to access a section which will allow you to select a specific address and change, remove or add a device manually.</p> <p>At the side of the loop device list are a series of buttons which will allow you to work on the device selected by a screen tap gesture, as follows:</p> <ul style="list-style-type: none"> - Delete: button to delete the selected device. - Add/Modify: button to change or add a device manually. After completing the connection of a new device or replacing an old device, it is necessary to select the address involved then tap on the Add/Modify button. When using Inim protocol, it is necessary to enter the serial number of the new device. - Program: button to access a section where it is possible to change some of the device parameters. <p>Once this operation has been completed the control panel will communicate with the new device. The appearance of the type of device detected is the confirmation of its presence.</p>
		<p>Arrow buttons</p>



Button to step back


Chapter 3

Configuration of the emergency voice system

Once the installation and cabling procedures have been completed (refer to the Installation Manual of the Previdia Ultra system) the system is ready for first startup.

In the case of first start-up, the selection of the control panel languages is requested (see *paragraph 4.5*).

The control panel screen will be as follows:

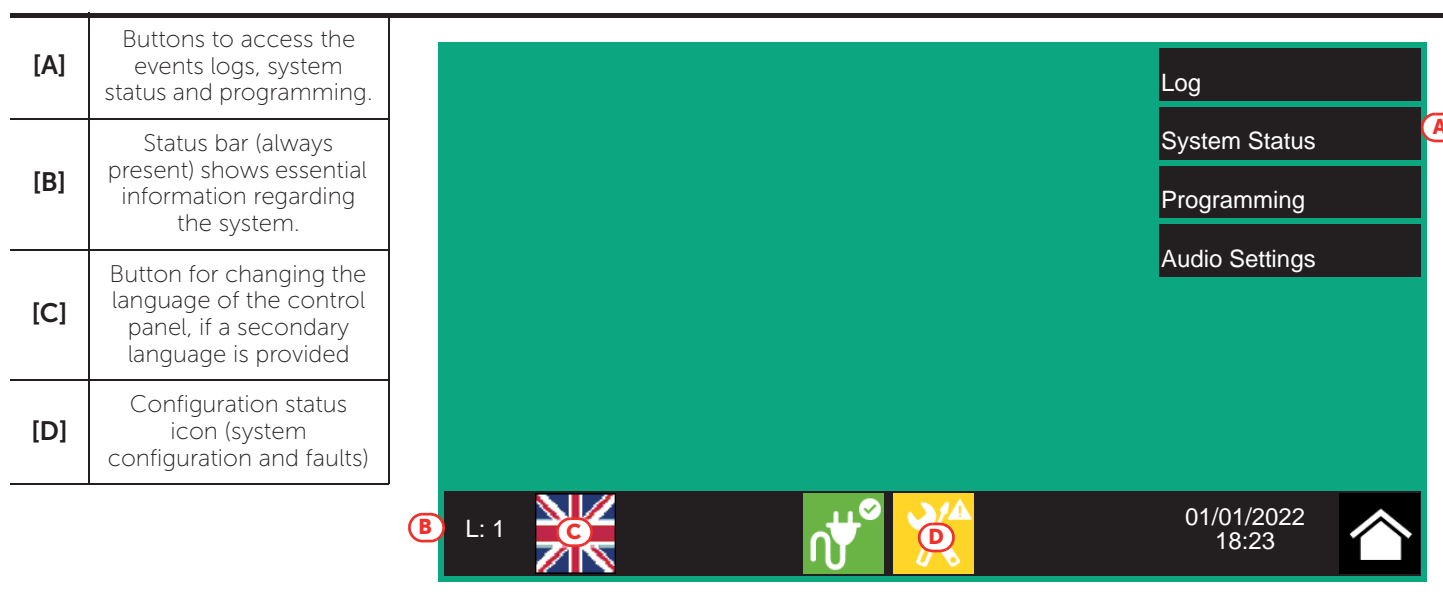

In this condition the control panel has no acquired configuration, all the modules connected to the CAN drive bar or front plate have the same address and are not included in the configuration.

The configuration status icon on the status bar indicates a fault condition, due to the fact that modules have been detected but are not present in the configuration saved in the memory.

In order to configure the control panel it is necessary to work through the following procedure:

1. Access programming (*paragraph 3.1*)
2. Set the IP network address (*paragraph 3.6*)
3. Access the configuration menu (*paragraph 3.2*)
4. Assign addresses to the system modules (*paragraph 3.3*)
5. Set the defined configuration (*paragraph 4.3*)
6. Check eventual signalling and search for faults (*paragraph 4.4*)
7. Set the date and time (*paragraph 4.6*)



Note:

Once the configuration operations have been completed correctly, the control panel will be ready to operate. At this point it is necessary to proceed with any configuration data modification operations to enter significant descriptions for the various elements of the system, and define sequences of particular activations, etc. Refer to the Programming manual.

3.1 Access to programming

In order to access the programming session of the voice emergency system, it is necessary to work through the following procedure:

1. Insert the programming jumper on the back of the FPAMIAS module (see opposite, [A]).
2. Press the **Programming** button on the stand-by screen (see above - [A]).
3. A keypad will appear (see opposite, [B]) for the entry of a code with installation privileges.

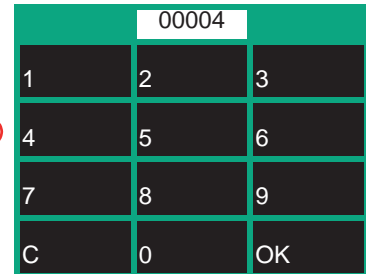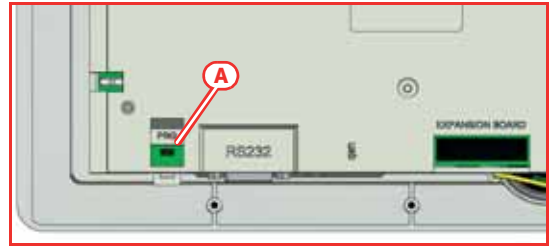

Note: The default access code to level 3 is "00004".

4. You access the programming menu, where the following items are available:
 - Configuration (paragraph 3.2)
 - Modify (paragraph 3.7.1)
 - Factory data (paragraph 4.5)

3.2 Accessing the configuration menu

To access the configuration menu it is necessary to first access the programming phase of the control panel (paragraph 3.1) and then tap on the **Configure** button which appears on the screen.


Alternatively, it is possible to tap directly on the configuration status icon (see above - [D]).

Entry of a valid access code is necessary In both cases.



Once the configuration menu has been accessed, the control panel screen will provide a layout of the control panel and its parts.

[A]	Internal layout of the selected cabinet
[B]	Internal module detected
[C]	Position empty
[D]	Address and firmware revision of detected module
[E]	Modules assigned to the fire detection and voice emergency system
[F]	Modules not assigned to the voice emergency system
[G]	Map of the entire control panel
[H]	Arrow button to navigate among the cabinets
[I]	Layout of the selected cabinet
[J]	Button to change the network address
[K]	Buttons to carry out setting changes or to exit without saving

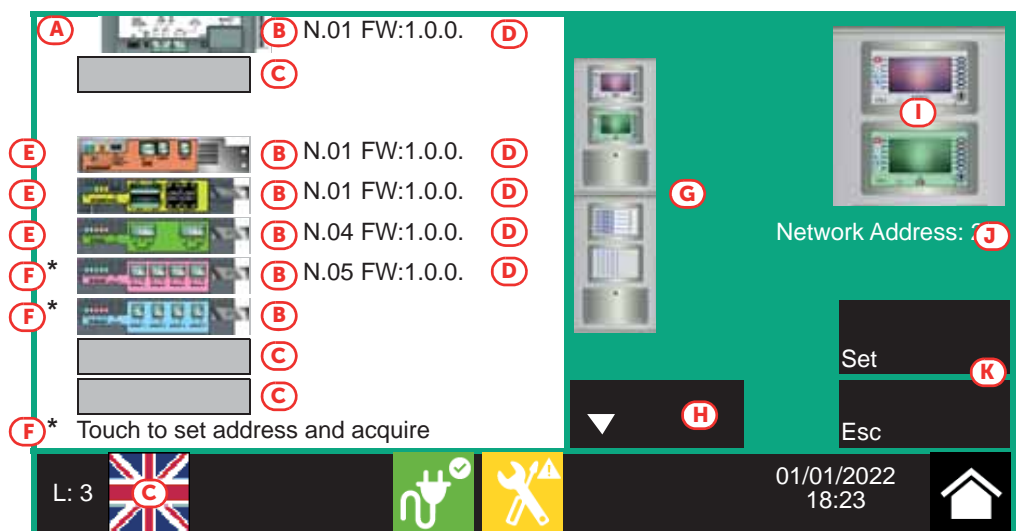

Selection of one of the cabinets from the control panel layout ((G)) will show it both on the left ((A)), where the installed modules with their addresses and firmware revision are shown, and on the right ((I)), where the installed external modules with their network address are shown. From this section you can access the configuration phase of each module by tapping on the icon which represents it.


The control panel also marks with an asterisk ("*", (F)) the modules not assigned to the associated system of the front plate module we are working on (in this case, the voice emergency system). Association is established by assigning an address to the module.

3.3 Modules addressing

In order for the control panel to identify each module individually, it is necessary to assign an address to each one. It is possible to assign the same address to modules of different types, however, modules of the same type must have different addresses.

To assign an address to a module, it is necessary to tap on the module shown in the section it belongs to (internal modules on the left (A); front-plate modules on the right (I)).

A window will open ((L)), select the desired address in the "Address" field, then tap on **Set**.

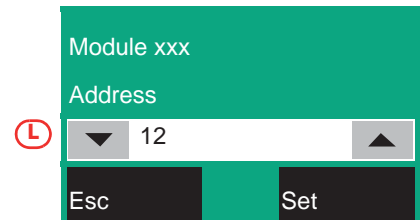

Note:

Addresses which exceed the maximum number of modules supported by the control panel will not be considered valid.

The modules that can be used by both the fire-fighting system and the voice system (FPMLED, IFM24160, IFAMPSU, IFM4R, IFM4IO, IFM16IO, (F)) must be addressed in such a way as to assign their management exclusively to one of the two systems.

Following is a table containing the addresses allowed for each type:

Module	Maximum number	Address	
		from	to
FPMLED	7	1	7
IFM24160	4	1	4
IFAMPSU	4	1	4
IFM4R	16	1	16
IFM4IO	16	1	16
IFM16IO	4	1	4
IFAMEVAC	1	/	
IFAMIDANET	1	/	
IFAMAMP	30	1	30
IFAMFFT	16	1	16

On returning to the control-panel configuration section, the assigned address ((D)) will be shown at the side of the previously selected internal module.

3.4 Configuration of the IFAMEVAC module

The configuration of the IFAMEVAC module is accessible through the main system configuration section of the emergency voice system (paragraph 3.2). The module can then be selected by tapping on the relevant icon in the section on the left, if the module is properly installed.



The section opens showing the following layout of the module:

[A]	Module layout	
[B]	Information on the module	
[C]	Button to access the microphone bases of line A/B	
[D]	Information regarding the microphone bases of line A/B	
[E]	Button to access the messages saved to the flash memory	
[F]	Button to access the messages saved to the micro SD card	
[G]	Buttons to carry out setting changes or to exit without saving	

Tapping on the buttons that access the configuration of the voice messages in the memory of the IFAMEVAC module or the micro SD card, if present, will display the list of available messages.



By selecting a message from the list it is possible to set the following parameters for playback purposes:

- number of repetitions
- pause between two repetitions
- priority
- message to be associated, to be used to attract the attention of those present in the building

In correspondence with the icons of the connection terminals of "MUSIC 1", "MUSIC 2", "A PAGERS", "B PAGERS" are buttons that allow you to program, for the connected audio sources concerned, the following parameters:



- description
- volume and treble/mid/bass balance
- priority

To the "AUX1" and "AUX2" inputs, furthermore, you can associate:

- an alert warning message
- the audio zones on which to execute the communication, in the case of the "PR" input

In correspondence with the icon pertaining to the "HANDSET" input, it is possible to program the parameters of the PTT microphone and telephone calls:



 
- description
- volume and treble/mid/bass balance
- priority (for the PTT microphone only)
- an alert warning message (for the PTT microphone only)

In correspondence with the LAN network terminal icon, it is possible to access the programming of the TCP/IP connection parameters of the module and the setup of the IAS server. If this is present, it will be possible to configure the following parameters by pressing the appropriate button:



- priority
- reception and transmission ports for UDP communication
- list of four IP addresses from which the server can receive commands and audio streams (optional, active only if the "IP Check" checkbox is selected)

Tapping on none of the access buttons to the configuration of the microphone bases displays a pop-up to start the enrolling of the bases on a line or to select one and configure the following parameters:



- description
- priority of non-emergency communications
- priority of emergency communications (if applicable for the selected base model)

- filtering algorithm for hands-free communications
- volume

3.5 Configuration of the IFAMFFT module

The configuration of the IFAMFFT module is accessible through the main system configuration section of the emergency voice system (*paragraph 3.2*). The module can then be selected by tapping on the relevant icon in the section on the left, if the module is properly installed.



The section opens showing the following layout of the module:

[A]	Module layout	
[B]	Information on the module	
[C]	Button for addressing the module	
[D]	Terminal information	
[E]	Buttons to carry out setting changes or to exit without saving	

In correspondence with the icons of the connection terminals of "Riser 1/2/3/4" are buttons that allow you to program, for the connected telephone lines concerned, the following parameters:



- description
- validity threshold of the impedance reading, when exceeded the open-circuit fault will be signalled
- tripping threshold, value of the current on the line, when exceeded the line is considered active
- selection of the type of circuit connected, if 4-wire or open circuit

The information for each of the 4 telephone lines is shown next to these icons. The voltage and current values are displayed and, in the event of a fault, the appropriate icon appears.



By tapping on the **Change Address** button it is possible to change the address of the module on the CAN BUS, which is shown in the section with the module information, together with the serial number and firmware version.



3.6 Configuration of the FPAMIAS panel

The configuration of the FPAMIAS module and the voice emergency control panel is accessible through the main system configuration section of the emergency voice system (*paragraph 3.2*). The module can then be selected by tapping on the relevant icon in the section on the right.



The section opens showing the following layout of the module:

[A]	Module layout	
[B]	Information on the module	
[C]	Button to access the settings	
[D]	Button to access the PTT microphone configuration	
[E]	Button to access the TCP/IP settings	
[F]	Button to access the SD micro card functions	
[G]	Buttons for setting the manual emergency procedures	
[H]	Buttons for setting evacuation and alert messages	
[I]	Buttons to carry out setting changes or to exit without saving	

Tapping on the button with the settings icon in the centre accesses a screen for the programming of the following voice-emergency control panel parameters.

- description of the control panel
- number of audio zones in the system
- number of audio sectors in the system
- buzzer enablement
- PTT microphone supervision
Option that if enabled, generates a fault in the event of disconnection of the PTT microphone.
- possibility to reactivate or not the emergency messages, when a new activation request is received after the system has been silenced following a first emergency
- possibility to change the playback volumes of voice and emergency messages with control panel not in programming status (see *paragraph 3.6.2*).



Tapping on the button corresponding to the PTT microphone icon accesses a screen for setting the audio zones on which the PTT microphone signal will be transmitted by default during the manual emergency procedure (see *Manual emergency procedure*).



Tapping on the button corresponding to the Ethernet network icon accesses a screen for programming the TCP/IP connection parameters.



Tapping on the button with the microSD card icon accesses several functions available thanks to the card, if present (*paragraph 3.6.1*).



Tapping on the button corresponding to the Manual emergency icon accesses a screen where it is possible to select whether or not to display the Help page in the Manual emergency procedure.



In the case that you choose not to display it will be possible to configure the Wizard parameters:

- parts of the system to select: you can define how the user can select the parts of the system to send in an emergency (all, audio zones, sectors or a combination of them)
- preset messages: you can define whether the user can select the alert warning call and the actual emergency message, or whether the default messages will be used

By tapping on the buttons with the "Evacuation" and "Alert" icons it is possible to set the audio zones on which the respective evacuation and alert messages will be transmitted by default during manual emergency procedure .



3.6.1 SD card functions via FPAMIAS

In the programming section of the functions available thanks to the SD card, A list is shown with the following buttons:



- **Save Program Data**, saves the control panel programming data to the SD card in a .dat file, the name of which coincides with the serial number of the control panel.
- **Save Log**, saves the contents of the events log to the SD card in a file named "xxxx_log.csv", where "xxxx" is the serial number of the control panel.
You can import the data contained in the file into a spreadsheet
- **Read Program Data**, if there is a .dat file on the SD card whose name coincides with the serial number of the control panel, the programming data contained in it will overwrite that currently used.
- **Read Display Config**, if the "Desktop.Bin" file is on the SD card, the data contained in it (images, buttons and labels to be displayed in the stand-by screen) will overwrite that currently used. If the previously-mentioned file is not present on the SD card, and there is the file "Logo. bmp" file is, the image contained in it (580x400 pixel) will be shown on the stand-by screen.

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

3.6.2 Change playback volumes with the control panel not in programming status

The programming section of the voice-emergency control panel parameters via the FPMAMIAS module has, furthermore, an option that allows the operator to change the playback volumes of the voice and emergency messages without placing the Previdia Ultra control panel in programming status.

The procedure to follow is described here.

1. Access the programming of the control panel, then the programming of the FPAMIAS module.
2. Enter the parameter programming section of the voice-emergency control panel and activate the option "Change emergency and voice volumes remotely".
The background colour of the status bar will change to yellow.
3. Exit the programming session.
With this activation carried out, an operator can change the playback volumes of voice and emergency messages from the App or from the programming software even when the control panel is not in programming status.
4. Make the appropriate changes to the volumes.
These changes will be saved in the system without having to save the system solution.
5. Return the control panel to programming status and disable the "Change emergency and voice volumes remotely" option.
The background colour of the status bar will return to the default colour.



3.7 Configuration of the IFAMAMP module

The configuration of the IFAMAMP module is accessible through the main system configuration section of the emergency voice system (*paragraph 3.2*). The module can then be selected by tapping on the relevant icon in the section on the left, if the module is properly installed.



The section showing the following screen will open:

[A]	Module layout	
[B]	Information on the module	
[C]	Button for addressing the module	
[D]	Button to access the settings	
[E]	Fan configuration button	
[F]	Amplifier configuration button	
[G]	Speaker line configuration buttons	
[H]	Relay test buttons	
[I]	Checkbox for the selection of the audio zone the amplifier belongs to	
[J]	Buttons to carry out setting changes or to exit without saving	

By tapping on the **Change Address** button it is possible to change the address of the module on the CAN BUS, which is shown in the section with the module information, together with the serial number and firmware version.

Change Address

Other information, i.e. module temperature, voltage and current values, are shown in the upper left section.

By means of the fan button it is possible to configure the activation and deactivation temperatures of the fan. Additionally, the icon on this button changes in accordance with the fan activation status.




Tapping on the button with the settings icon accesses a screen for the programming of the following amplifier module parameters:

- description of the module
- priority of the optional "Local Audio" input
- speakers to module connection type

Other parameters of the amplifier module can be reached via the button on the top left:

- for each of the three types of communication (emergency messages, non-emergency audio or hands-free) you can program volume and balance (high, medium and low)

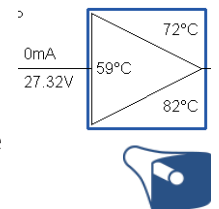

Tapping on one of the buttons with the speaker icon accesses the section where you can program the monitoring parameters for the speaker line impedance:

- test signal level
- thresholds within which the line resistance is considered correct
- delay in signalling the relative fault

The resistance currently measured is also displayed and, by means of the appropriate button, the fault signalling thresholds can be set to tolerate a deviation from this value of 20%.

By tapping on the audio zone box it is possible to select the zone the IFAMAMP amplifier is assigned to. The speaker lines connected to the amplifier will all belong to this audio zone. The amplifier will play the audio stream with the highest priority, among those available on the CAN bar of its control panel and assigned to the zone it belongs to.

Audio Zone

By tapping on the relay buttons it is possible to change their status solely for test purposes. Once programming is exited, the status of the relays will be determined by the options set and the system status.



3.7.1 Configuration of zones and audio sectors

The configuration of the logical groupings of the loudspeaker lines (audio zones and audio sectors) necessarily involves all the Previdia Ultra control panels connected to a network. In this case it is possible to program only via the software.

In the case that the Previdia Ultra control panel is not connected to a network (network address equal to "0"), a programming section is available from the panel via the **Modify** button on the programming menu (*paragraph 3.1*).

The section you access will show the list containing the access buttons to the programming subsections:

- Audio Zones
- Audio Sectors

Pressing one of these buttons will allow you to view the list of the respective elements. The list shows the index, description and status of each element, by tapping on one of the lines you will be able to program the parameters of the individual element.

The editable parameters are:

- description of the audio zone or the audio sector
- the messages that will be played by default if one of the three emergency statuses is activated for the audio zone
- the audio zones that belong to the sector

Generic configuration of the control panel


This chapter describes the control panel configuration phases that can involve both the fire alarm system and the voice emergency system when both are present.

4.1 Setting the network address (Hornet+ and IDANet)

In the event that the installation involves more than one control panel connected to the network (through a Hornet+ connection or an IDANet connection, or both for the integration of the two systems), the network address must be set for each control panel.

The presence of a control panel in the network is determined by the presence in the configuration of an IFMNET or IFAMIDANET module and by a network address other than "0". To change this address, tap the appropriate button in the system configuration (*paragraph 2.3 - [I], paragraph 3.2 - [J]*). In the section which appears, enter the network address and the bit rate.

By selecting the single IFMNET or IFAMIDANET module in the section with the layout of the inside of the cabinet (*paragraph 2.3 - [A], paragraph 3.2 - [A]*), it will also be possible to enter the network communication bit rate and gateway of the module (only for IFMNET from FPMCPU).

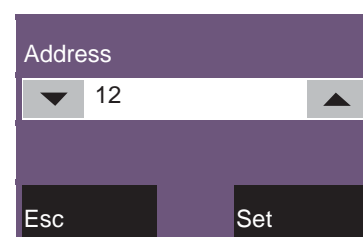

Note:

Each control panel in the same Hornet+ or Idanet network must be set with the same bit rate and univocal address.

If different network addresses are programmed on the FPMCPU and FPAMIAS of the same control panel, these addresses are coloured yellow, as is the configuration icon on the bottom bar.

4.2 Configuration of the IFAMPSU and IFM24160 power-supply modules

The power-supply modules installed in the Previdia control panel power the entire system, both fire and voice emergency. Nevertheless, the management of each of these modules must be entrusted to one of the two sub-parts, proceeding with addressing via the relative front plate module (FPMCPU or FPAMIAS).

The configuration of the power-supply modules is accessible through the main system configuration section (*paragraph 2.3, paragraph 3.2*). The module can then be selected by tapping on the relevant icon in the section on the left, if the module is properly installed.

The section opens showing the following layout of the module:



[A]	Information on the module	
[B]	Button for addressing the module	
[C]	Section containing a list of current faults	
[D]	Voltage and output current of the module	
[E]	Battery parameters (internal resistance, voltage, status and current)	
[F]	Internal temperature and battery charge voltages	
[G]	Fan configuration button (IFAMPSU only and by FPAMIAS only)	
[H]	Buttons for selecting the delay time (in minutes) for network delay signalling (only from FPAMIAS)	
[I]	Button for instant battery test, normally performed every 10 minutes (only from FPAMIAS)	
[J]	Buttons to carry out setting changes or to exit without saving	

By means of the fan button it is possible to configure the activation and deactivation temperatures of the fan.



By tapping on the **Change Address** button it is possible to change the address of the module on the CAN BUS, which is shown in the section with the module information, together with the serial number and firmware version.

Change Address

Note: *Addresses which exceed the maximum number of modules supported by the control panel will not be considered valid.*

4.3 Acquiring the configuration

Once the previously described operations have been completed, it will be necessary to save the defined configuration to the control panel memory. This operation can be done via the configuration screen, by means of the **"Set"** button (paragraph 2.3 - [J], paragraph 3.2 - [K]).

A progress bar will confirm data saving in course.

Once this operation has been completed and valid addresses have been assigned to all the devices, the configuration status icon will turn green. Any successive changes to the hardware configuration (for example, the loss of a module or addition of a new module) will turn the icon yellow to signal that the control panel configuration is different to the one saved to the memory.



4.4 Signal check and fault search

Once the configuration setup has been completed, the control panel will check the status of the devices and input/output terminals.

Eventual faults on these elements will be shown on the screen. In this case, it is necessary to remove the causes of the fault until you return to the stand-by screen that shows no fault messages (refer to the Previdia Ultra system installation manual).


4.5 Factory data

The **Factory data** button from the programming menu (*paragraph 2.3 - [J]*, *paragraph 3.2 - [K]*) deletes all the configuration data and resets the control panel to the factory default settings.

As an alternative to using the Factory data button, it is possible to reset the factory default settings by means of the buttons on the back of the front-plate module. Press and hold the "Factory data" button [A] and press and release the "Reset" button [B].

Following confirmation of the request to reset to the factory data, the selection of the control panel languages will be requested (a mandatory main language and an optional secondary language).

A progress bar will confirm factory data resetting in course.

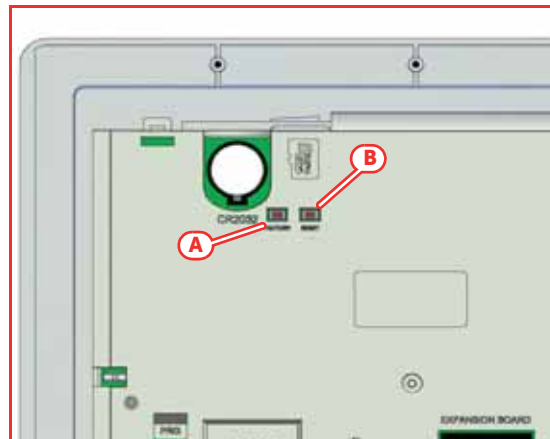

4.6 Setting the date and time

When setting this parameter, it is necessary to tap on the respective field in the bottom right-hand corner of the screen, enter an access code with either supervisor or installer capabilities then, by means of the scroll keys, navigate through the programming fields and set the desired date and time.

4.7 Firmware revision



The installer of Previdia Ultra system can see the firmware revision of each control panel module in order to facilitate any upgrade or configuration procedure.

Such information can be achieved depending on the type of the module:


Front-plate module: by means of the **System Status** button on the display in the stand-by condition, you can access a section where it is possible to view the status of the various system elements.

In the lower left corner of this section [A] you can see:

- serial number of the front plate module in use
- counter of the number of alarms starting from system installation
- firmware version of the front-plate module (FW, both the main and the emergency backup CPU.)
- minimum required revision of Previdia/STUDIO configuration software (SW)
- site specific data release (Data), progressive number of system configuration upgrades

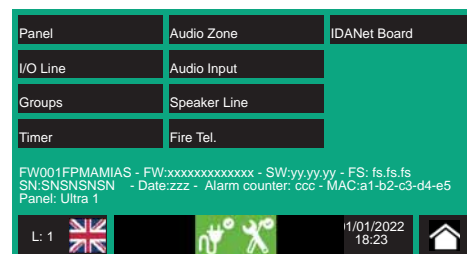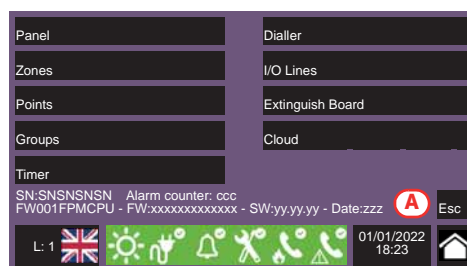


FPMLD, FPMPRN, FPMEXT front-plate modules: the module firmware revision is written on a label on the back of the module [B]; the label can be seen by opening the cabinet door when the module is already installed.

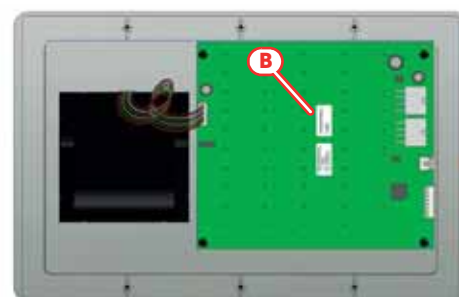

Internal modules: the firmware of each internal module (already installed) can be seen by accessing to the configuration menu (paragraph 2.3 - [J], paragraph 3.2 - [K]).

The address and the firmware revision of the detected modules are shown in the proper section [C].

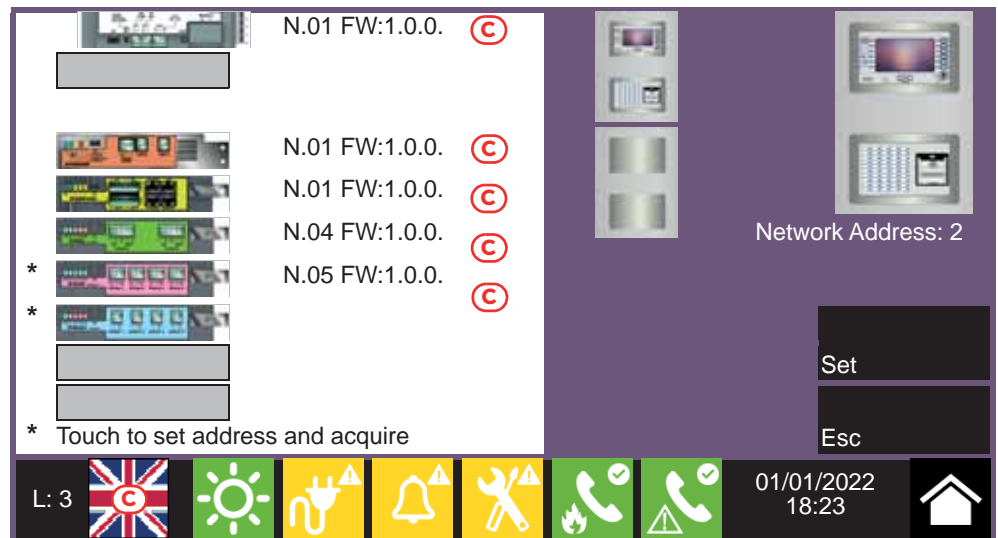

4.8 Registration of the control panel to Inim Cloud

The registration of a control panel is an operation that allows its accessibility to all Inim Cloud service users. It is therefore necessary that the registration is carried out first by the installer, registered with the Inim Cloud service, so that later users can add the already registered control panel to their own account.

1. Access the programming phase of the control panel (paragraph 2.1) and then press the **Network** button on the menu that appears on the screen.
2. Enable the "Cloud enabled" option.
3. Access the "Enroll" section via the button that appears below.
4. Enter the 8-digit ID-installer number contained in the confirmation email received during registration to the Cloud as an installer.

In this section you can activate the "Installer Property" option. If activated, the installer reserves the management of accesses to the system by the Cloud. If not activated, this property is assigned to the first user enrolled

5. Press the **Enroll** button. The control panel will carry out the registration of the control panel on the Cloud and the display will show the "WAIT" message.
If the control panel date/time differs by more than 15 minutes from the exact date/time, the registration process may result negative.
6. The screen will show the outcome of the procedure via one of the following messages:
 - "Account created!": the control panel has been successfully registered to Cloud
 - "Communicat.Error": generic communication error.

The possible causes may be:

- no Internet connection
- date of manufacture of the control panel is earlier than dd/mm/yyyy
- date/time of control panel different, ahead of or behind the exact date/time by more than 15 minutes
- "Already enrolled": the control panel is already registered to Cloud
- "Panel notEnabled": the control panel cannot be registered to Cloud.

Chapter 5

Commissioning

The commissioning phase is a set of tests and inspections which are necessary to ensure the full efficiency and proper functioning of the system as specified in the system project. This phase is essential and must be performed in a scrupulous way in accordance the regulatory requirements of the country where the system is installed and in full respect of the recommendations in the following section.

Ensure the test and inspection procedures are performed only after checking the safety of the system and after having verified that any device activations controlled by the system will not cause any conditions of danger, and that all the building occupants who can be reached by the audible and visual signalling have been informed.

Ensure that the person who is responsible for the security of the building where the tests and inspections are to be carried out has taken countermeasures to avoid any situations of panic or distress for the building occupants.

5.1 Testing the Control panel

It is necessary to check the functionality status of the frontplate by first checking the information supplied on the screen and LEDs and then by inspecting the efficiency of the command devices (user-interface buttons, access keys, etc.):

- Check the functionality status of the screen and ensure that the information provided is clear.
- Ensure that the descriptions of the various zones, points and system elements entered during the data-entry phase are correct, and that the information provided on the screen clearly indicates any detectable conditions of danger.
- Check that there are no indications present of faults, alarms or anomalies of any type whatsoever. In the event of such indications, proceed with the removal of the causes of faults and anomalies.
- Check the status the functionality of the LEDs and buzzer. The front panel provides a button for the simultaneous activation of all the LEDs and buzzer thus allowing evaluation of their efficiency (refer to the description of the User Interface).
- Check the efficiency of the front-plate buttons and keys.
- Check the status of the power-supply sources (mains and batteries) and the consumption conditions of the control panel. The power-supply parameters can be checked by accessing the configuration menu (*paragraph 2.3, paragraph 3.2*) and selecting the configured IFM24160 or IFAMPASU modules.

The sections show the voltages, currents and temperatures of the various elements:

[A]	Button for addressing the module	<p>The screenshot shows the control panel interface with the following callouts:</p> <ul style="list-style-type: none"> A: Change Address button B: Low battery voltage / Missing mains warning C: Output 27.0 V / 0.225 A D: Battery parameters (150 mOhm, 26.2 V, 28°C, Charging 0.222 A) E: Temperature 37°C / 27.2 V
[B]	Section containing a list of current faults	
[C]	Voltage and output current of the power supply	
[D]	Battery parameters (internal resistance, voltage, status and current)	
[E]	Internal temperature and battery charge voltages	

5.2 Testing to detectors and manual activations

All the installed detectors must be tested during the commissioning phase. It is necessary to check the capacity of each detector to react to a simulated condition of fire, and to check the precision of the signals transmitted to the control panel in response to its activation (description of the point and zone).

For this purpose it is possible to use the **Test** button of the control panel ((/A)) on the "Zone Status" screen, accessible via the "System Status" menu on the home page.

By tapping this button it is possible to place one or more zones in test status. The activation of a detector which belongs to a zone in test status will not generate any alarm signalling or activate the outputs or signalling devices. However, the control panel will activate the signalling LEDs on the detectors and will perform automatic reset after a few seconds without any need of further intervention by the operator on the control panel.

N.	Description	Status
1	Zone 01	Standby
2	Zone 02	Fault
3	Zone 03	Standby
4	Zone 04	Standby
5	Zone 05	Alarm
6	Zone 06	Standby

Buttons: Disable, Test (A), Esc. Bottom bar: L: 2, UK flag, icons, 01/01/2022 18:23, Home icon.

The activation of a point which belongs to a zone in test status will be recorded in the events log. Therefore, on completion of the test on all the zone devices, the operator can check the congruence of the various indications by means of the log.

The activation of all the manual call points (alarm buttons) must be tested in the same way as described for the detectors.

5.3 Testing signalling and activations

The functionality and efficiency of all the signalling devices must be checked thoroughly.

It is possible to test such devices by activating the relative LEDs and outputs manually at the control panel via the respective management page ((/B)).

To reach this page you must access the "Point" section via the "System Status" menu on the homepage. Select the desired loop and point to be tested from the lists shown then, by means of the relative **View** buttons go to the management screen where you will find the **Turn on output** and **Turn on LED** buttons.

Loop Card: 03 Point: 03 SNSNSNSNSN
Photo/Heat Detector
Zone 02

Missing device	Change	Info
	Turn on output (B)	Real time
	Turn on LED	IP Camera
	Disable point	Map
	Disable zone	Esc

Bottom bar: L: 2, UK flag, icons, 01/01/2022 18:23, Home icon.

Note: *Testing devices by means of manual activation does not test functionality and efficiency of the cause/effect association which determines their activation (programming coherence of groups), therefore, it is necessary to perform real functionality tests.*

5.4 Speaker test

The functionality and efficiency of all the speakers must be checked thoroughly.

For this purpose, carry out the operations set up for the manual activation of the emergency, according to the provisions of the emergency management plan of the supervised installation.

In the case of the presence of a fire detection system, check that its activation causes the transmission of the appropriate voice messages, according to what is set up in the plan of the two systems (fire prevention and voice evacuation).

5.5 Testing the extinction system

Particular attention must be paid to the testing of eventual fire extinction systems.

Special attention must be paid to the functionality and safety of the extinguishing-agent release devices before proceeding with the testing of all activation and stop-extinction procedures in accordance with the requirements of the executive project.

5.6 Maximum time settings. Normative restrictions

During programming via the Previdia/STUDIO software you can set the time length or delay of many control panel functions. The normative reference standards require maximum duration for the following parameters:

- **Prealarm time**, the maximum delay time is 10min (EN 54-2 - clause 7.11.1 (c)).
- **Verification time OFF (s)**, if the verification function is enabled for an input device, the time for which the device remains deactivated after the first activation must be 60 seconds maximum (EN 54-2 - clause 7.12.1 [b]).

- **Verification time (s)**, if an input device has the alarm verification option enabled, the maximum verification time is 30 minutes (EN 54-2 - clause 7.12.1 [c]).
- **Lock reset time after released (min)**, the maximum time is 30 minutes (EN 12094-1:2003 - clause 4.12.2).
- **Pre-extinction time on automatic/manual activation**, the maximum time is 60 seconds (EN 12094-1:2003 - clause 4.17.2).
- **Valve ON time**, the maximum time is 300 seconds (EN 12094-1:2003 - clause 4.21).

Refer to the PrevidiA/STUDIO software programming manual for more details about the parameters listed above.

Chapter 6

Maintenance

For correct and efficient management of the system it is necessary to carry out periodic maintenance in accordance with the regulatory requirements of the country where the system is installed and in full respect of the recommendations contained in this section.

For the frequency of the maintenance operations it is necessary to adhere to the applicable regulations. However, the manufacturer recommends that tests are performed on each point, component and element of the system at least once a year.

6.1 Testing the control panel

Work through the steps for control-panel test procedure as described in the commissioning section (*paragrafo 5.1 Testing the Control panel*).

Additionally, consult the events log and check for the presence of fault or alarm conditions which must be investigated.

6.2 Testing the detectors

As well as the tests which must be performed during the commissioning phase (*paragrafo 5.2 Testing to detectors and manual activations*), it is also necessary to check the contamination level in smoke detectors.

The management and configuration software provides a loop diagnostic function which allows you to gather the contamination values of the various devices in such a way to decide when cleaning is necessary.

Refer to the Programming manual for details regarding the diagnostic function and the detector manual for the instructions regarding cleaning operations.

6.3 Manual activation test

Work through the same tests as recommended in the commissioning section (*paragrafo 5.2 Testing to detectors and manual activations*).

6.4 Testing signalling and activations

Work through the same tests as indicated in the commissioning section (*paragrafo 5.3 Testing signalling and activations*).



Evolving Security

ISO 9001 Quality Management Certificate issued by BSI
with number FM530352

Inim Electronics S.r.l.

Centobuchi, via Dei Lavoratori 10
63076 Montepandone (AP), Italy
Tel. +39 0735 705007 _ Fax +39 0735 704912

info@inim.biz _ www.inim.biz

