


Waterproof cable connector installation instruction

Accessories:


- a. 2 pcs end covers
- b. 2 pcs long tubes
- c. 1 pcs central tube
- d. 2 pcs O-shape sealing rings
- e. 2 pcs waterproof sealing plugs

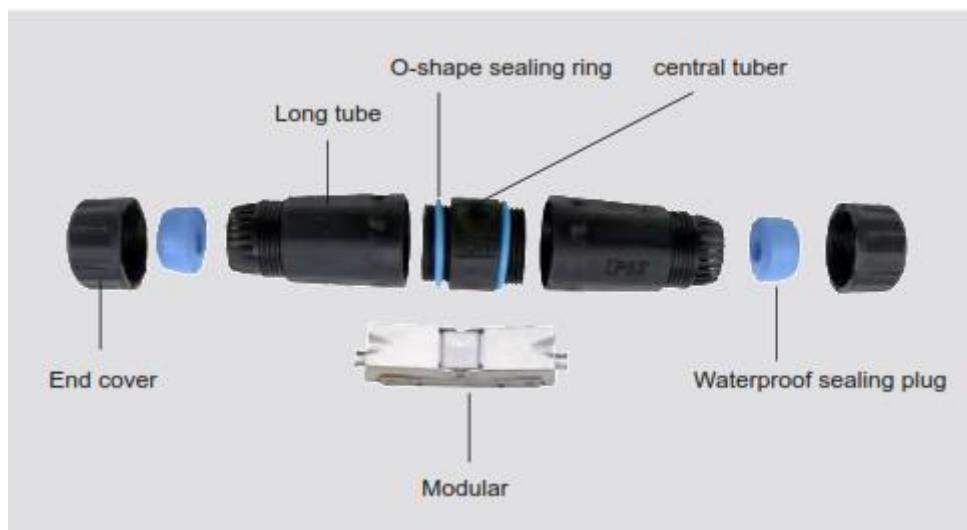


1. Pass one cable through the end cover, the long tube, and central tube in turn; pass the other cable through the end cover, long tube in turn.



2. Strip off 30mm of cable jacket and fold braid back over it. Cut off aluminum foil for each pair, and use a supplied copper foil shield surrounding a cable.

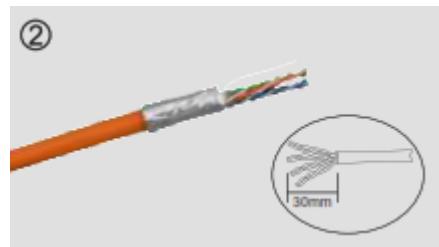


3. Fan out four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

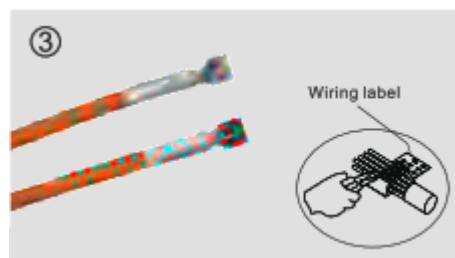


4. Place wiring cap on connection module. Close connection module cover, make sure the drain wire is in proper contact with grounding clip on connection module.




5. Fasten supplied cable tie to secure grounding contact.

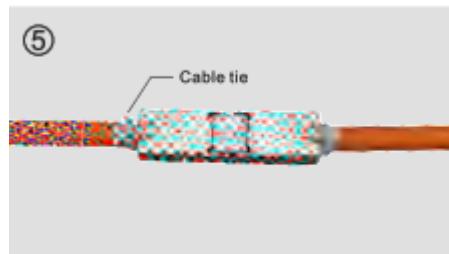


6. Install the cables to the modular according to the modular instruction manual.

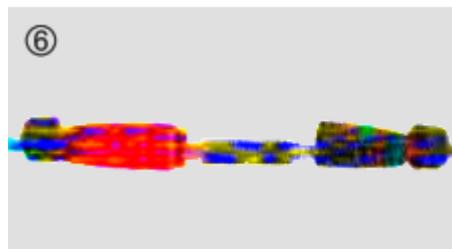

7. Assemble two long tubes by rotating the threads.

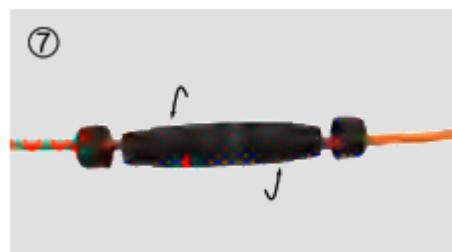

8. Lock the two waterproof plugs on the cable, then put them into the end of the long tube. Note: The plug is engraved with the word "waterproof" on one side outward.

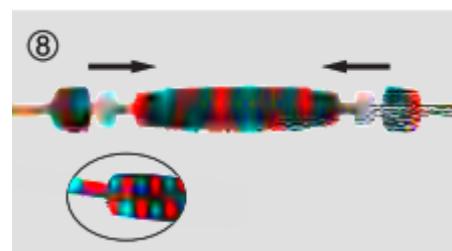

9. Screw the end cover at both ends onto the long tube. Finally check whether the waterproof plug is closely matched with the cables.